
### Wall Panel Schematics

Cellulose - R28 - 2x10 - 1/2" Plywood

**ReCover Initiative** 


### **Basic Panel - Overview**

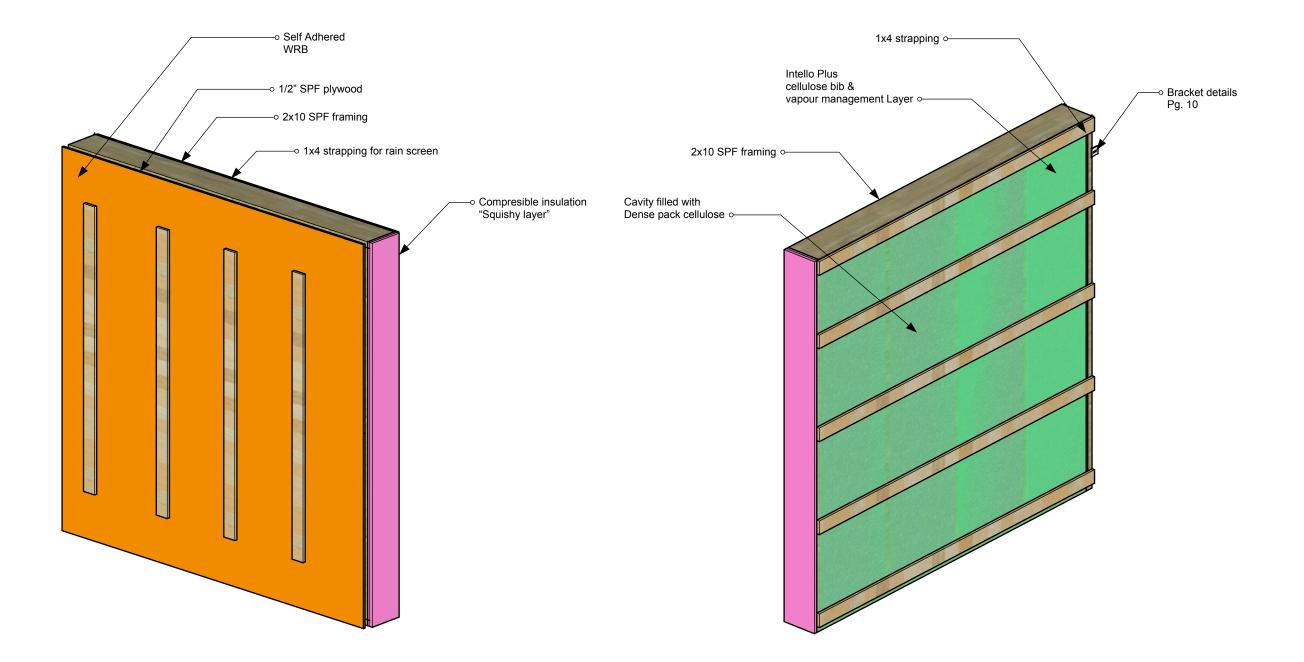


EXTERIOR VIEW INTERIOR VIEW

# ReCover

### Basic Panel - Exploded View

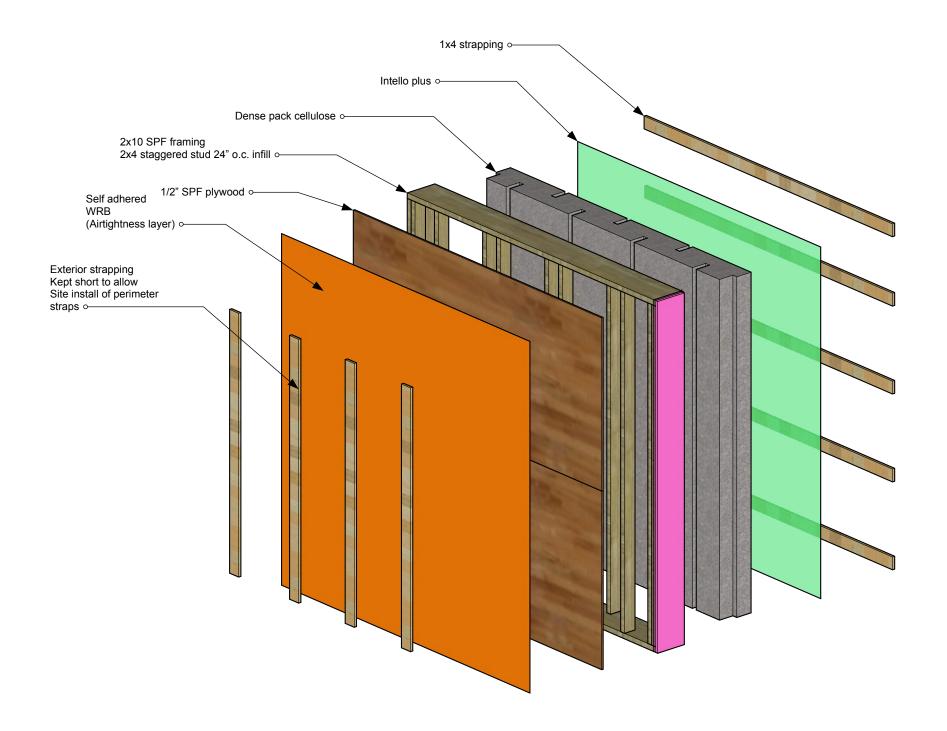

### Inside Corner Panel - Overview

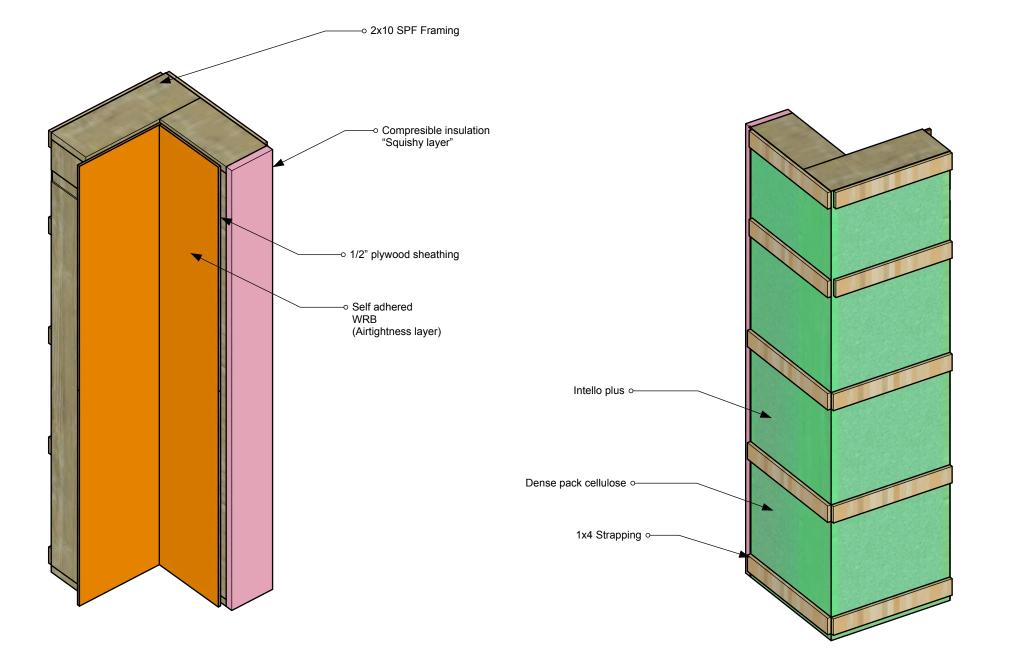


EXTERIOR VIEW INTERIOR VIEW

## ReCover


Version Date February 27, 2023

Inside Corner Panel - Exploded View


### Inside Corner Installed

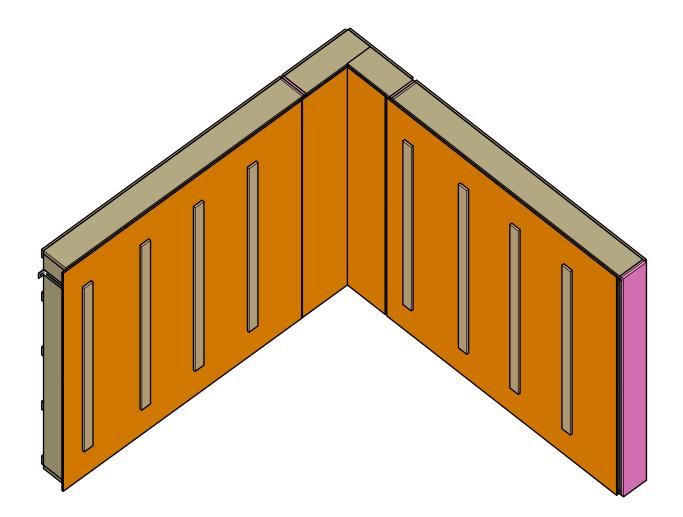


**EXTERIOR VIEW** 

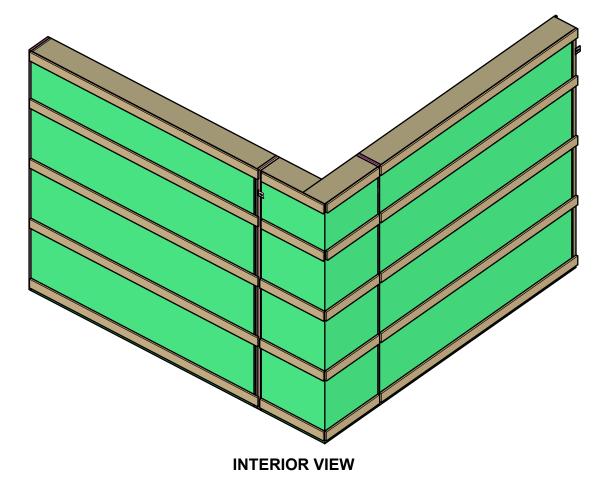

### Outside Corner Panel - Overview

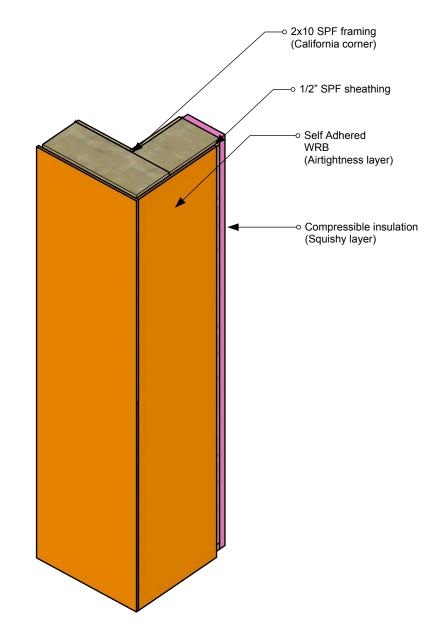

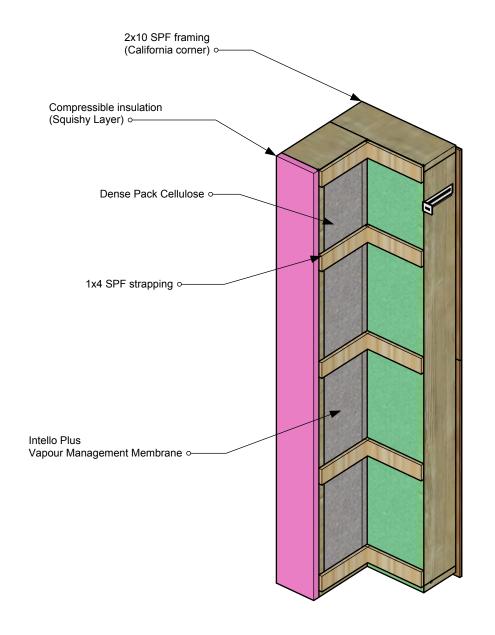


EXTERIOR VIEW INTERIOR VIEW

## ReCover


Version Date February 27, 2023

Outside Corner Panel - Exploded View

### Outside Corner Installed

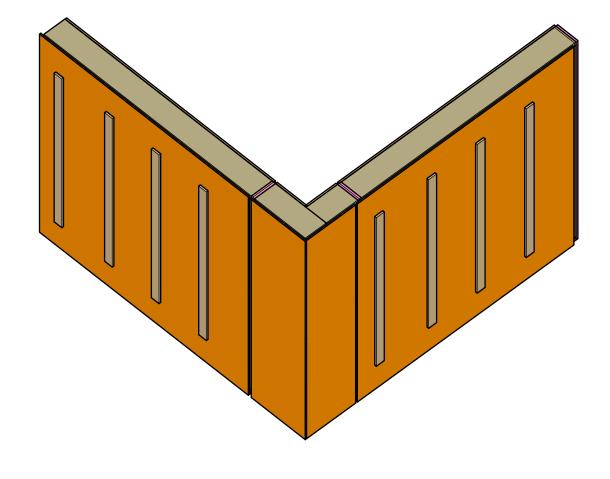

**EXTERIOR VIEW** 

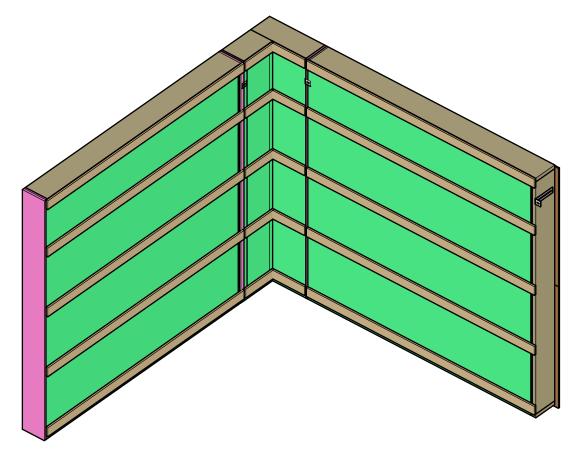


**INTERIOR VIEW** 

### Foundation Attachment - Brick Ledger


**BEFORE SITE INSULATION** 

"Brick Ledger" style continuous ledger for panel support

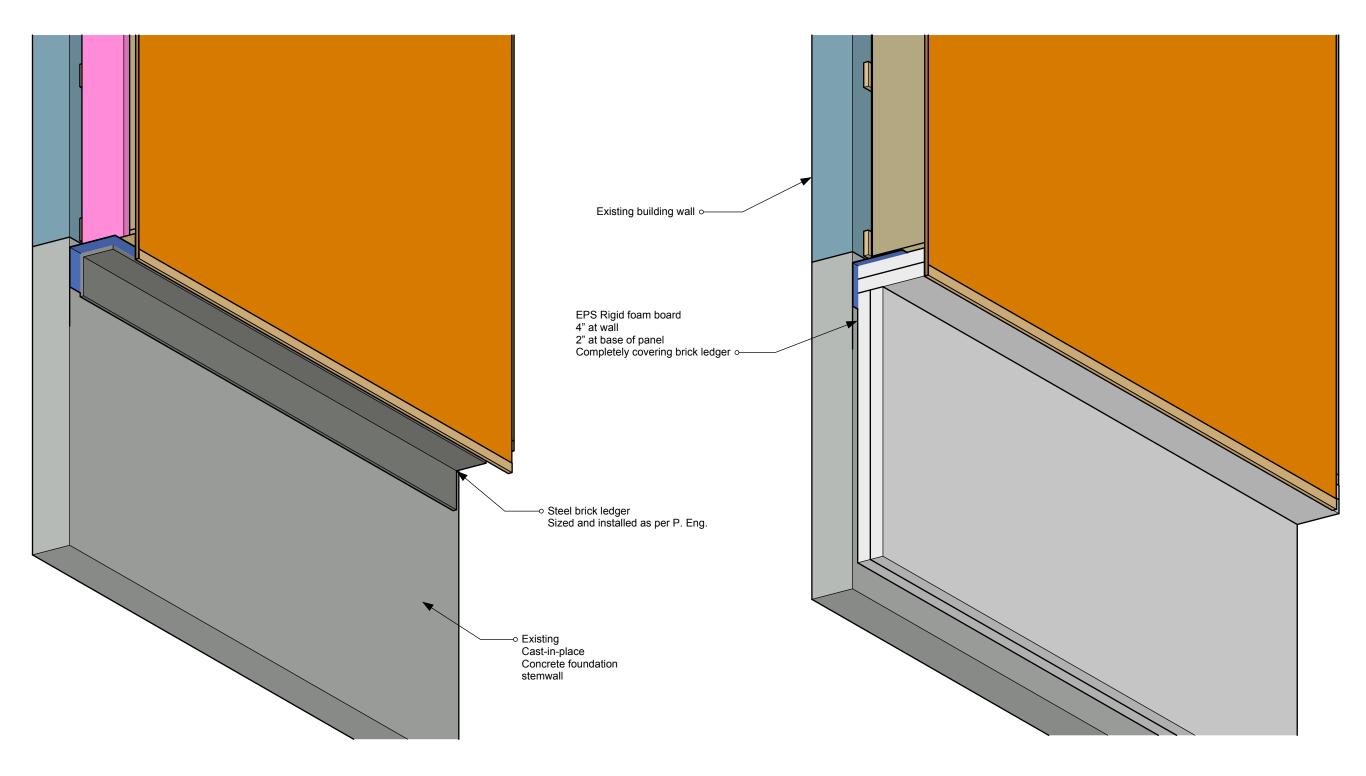


**AFTER SITE INSULATION** 

#### Alternate Foundation Attachment - Pile or Bracket

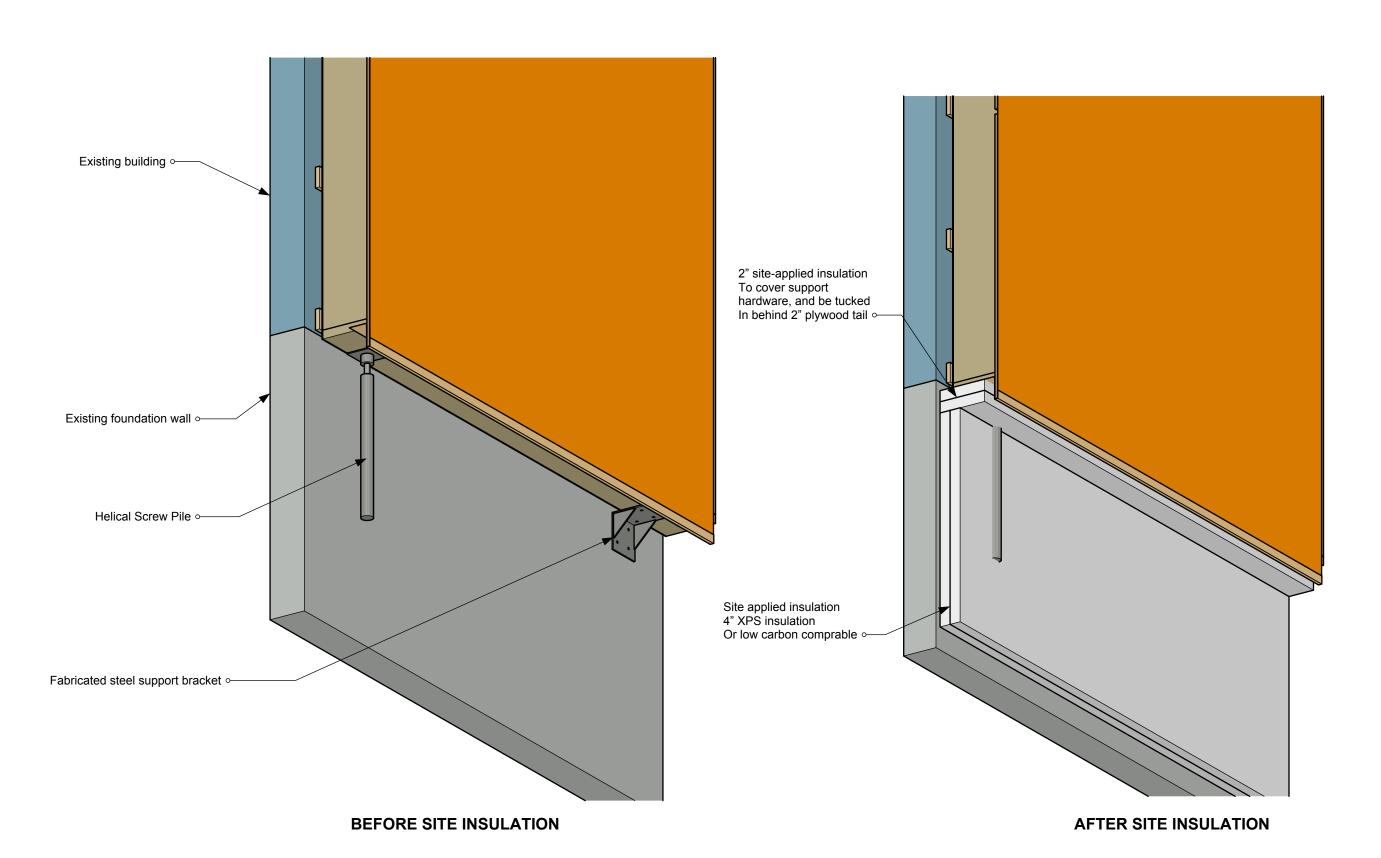



### Attach to Existing Building


Bracket to attach individual panels to existing

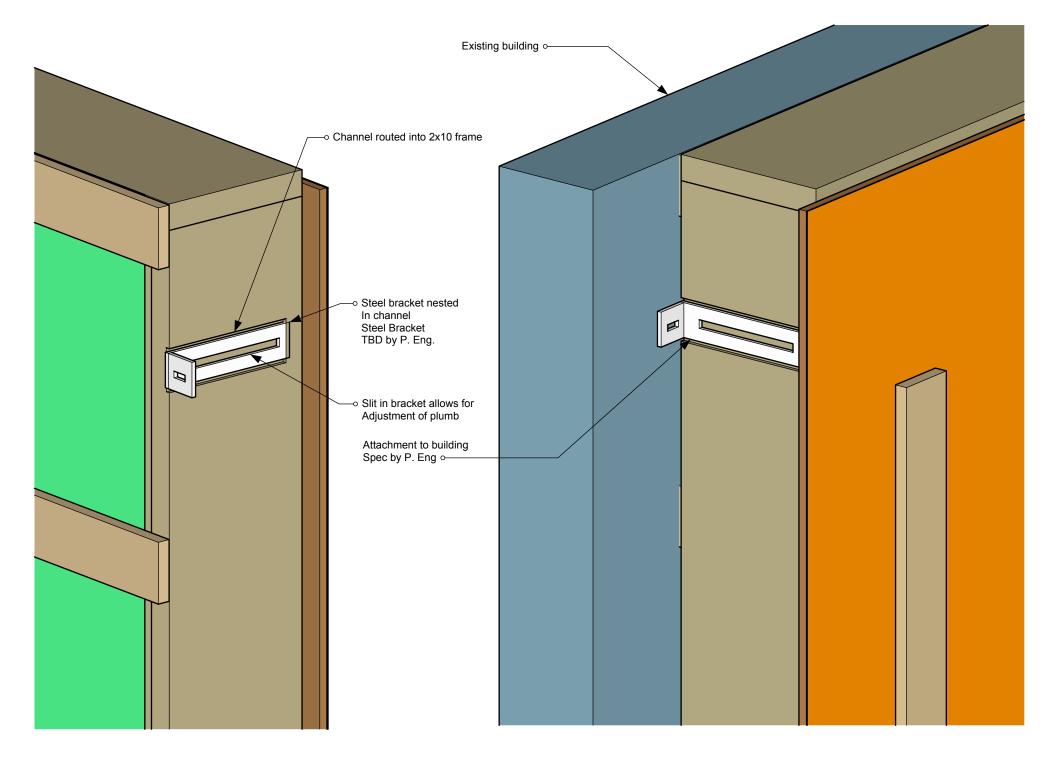

INTERIOR VIEW EXTERIOR VIEW

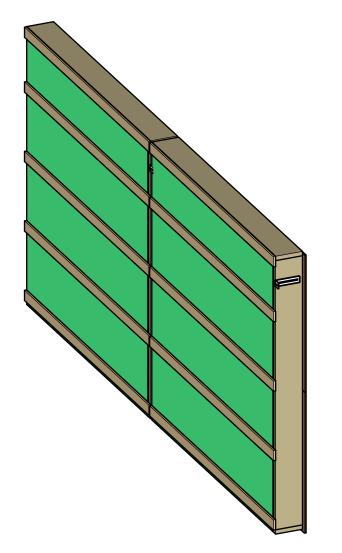


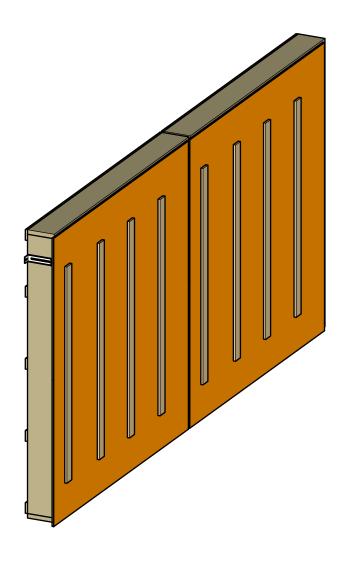

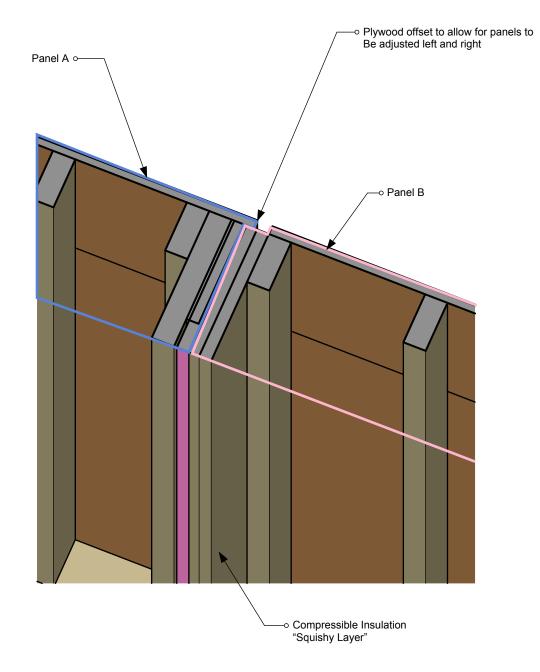



INTERIOR VIEW SECTION VIEW


### Horizontal Wall Joins

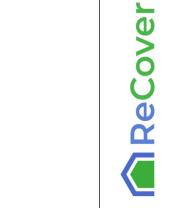


Version Date February 27, 2023

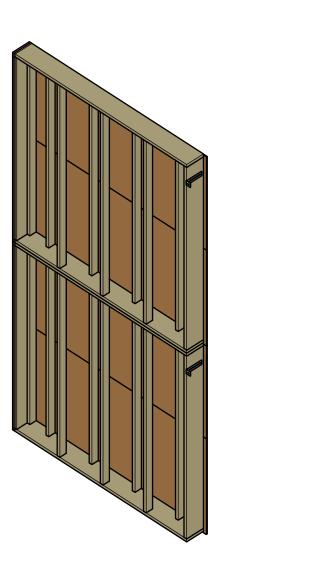

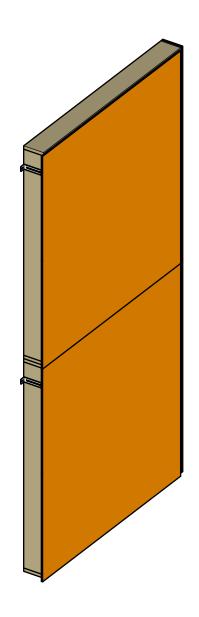


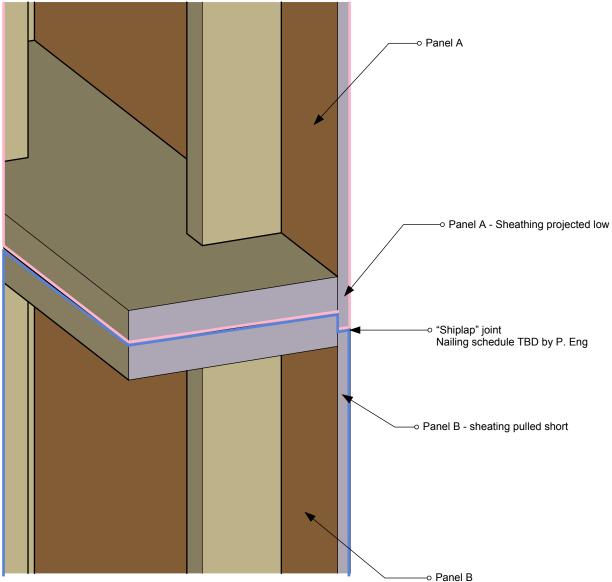


INTERIOR VIEW EXTERIOR VIEW SECTION VIEW

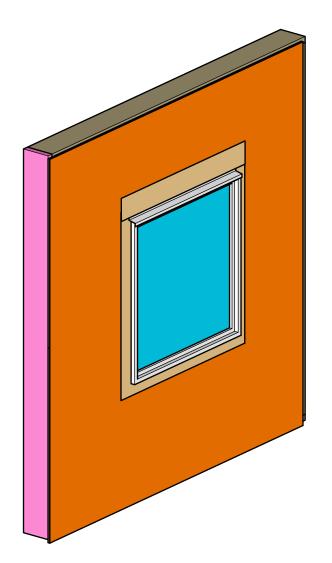




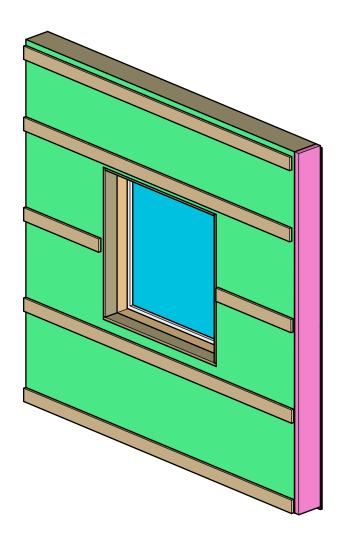


PANEL EXTERIOR VIEW

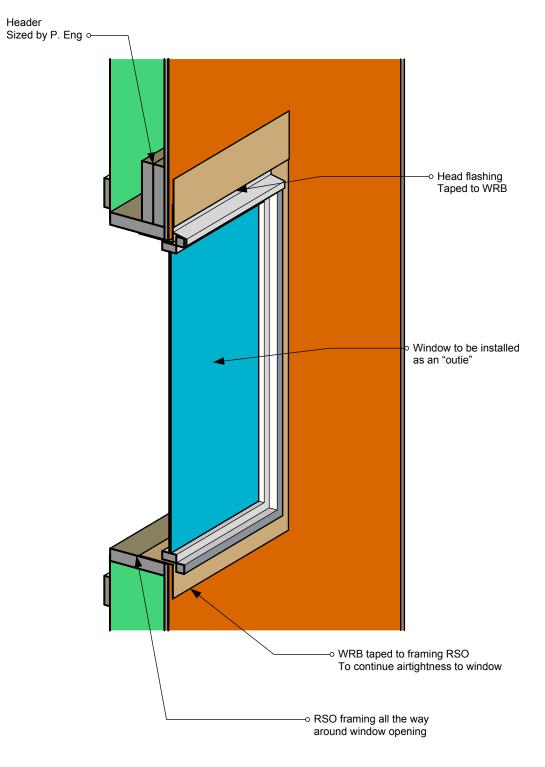



### Window Panel Install

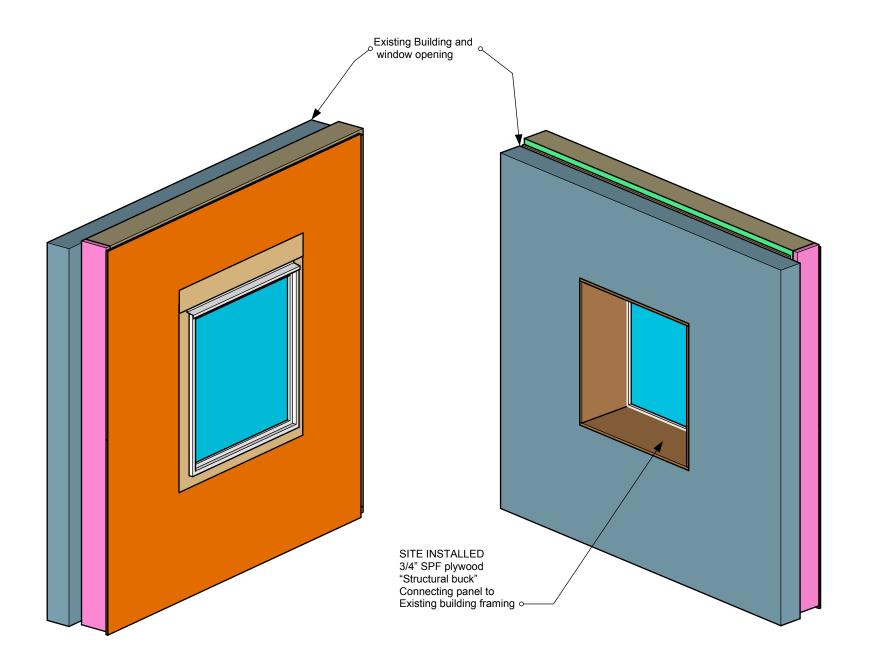

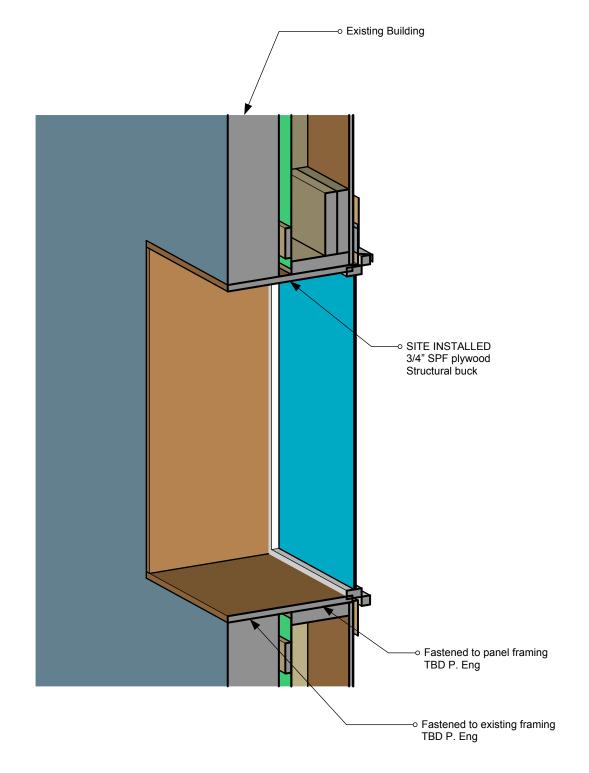

#### **Door Penetration Panel**

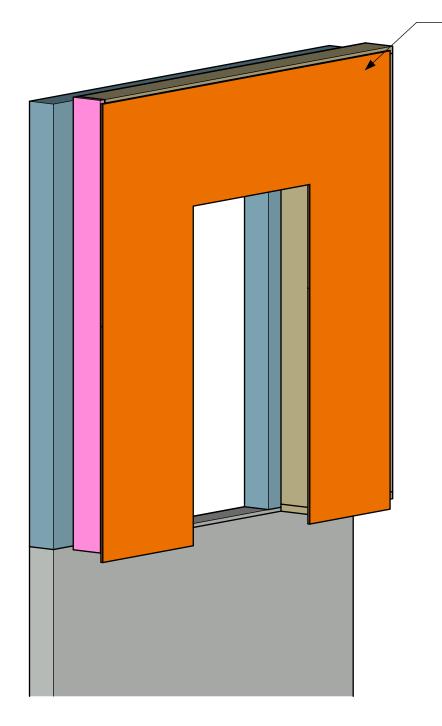

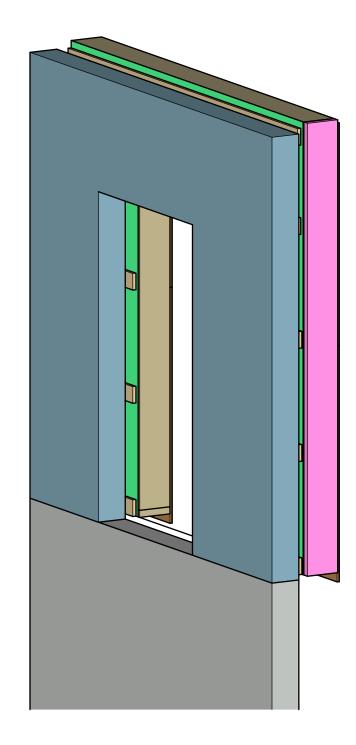


■ ReCove

Version Date February 27, 2023

EXTERIOR VIEW INTERIOR VIEW

Door panel Installed without door in place

Door installed on existing sill

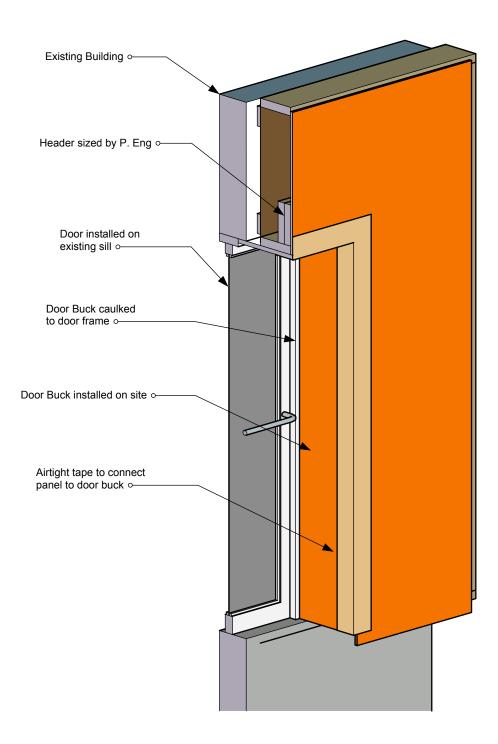

EXTERIOR VIEW INTERIOR VIEW

**SECTION VIEW**